

Some RV's (usually older) have a separate Anti-Freeze valve (normally closed) and Fresh Water valve (normally open). If you have this, you can fill your FW tank from the AF line by opening both valves at once. Be careful and fill slowly – if you fill faster than the FW tank vent can handle, you'll blow up your FW tank.

Instead of separate AF and FW valves, some RV's have a single 3-way valve, where you chose the suction source from either the Anti-Freeze line or the Fresh Water tank line. This valve MAY allow you fill the FW tank from the AF line IF it opens one side before it closes the other. This will depend on how your valve is built.

Using AF connection, water pump and outside shower to fill FW tank from portable water tank. (grey arrows)

