


Some RV's (usually older) have a separate Anti-Freeze valve (normally closed) and Fresh Water valve (normally open). If you have this, you can fill your FW tank (tan arrows) from the AF line by opening both valves at once. Be careful and fill slowly – if you fill faster than the FW tank vent can handle, you'll blow up your FW tank.

Instead of separate AF and FW valves, some RV's have a single 3-way valve, where you chose the suction source from either the Anti-Freeze line or the Fresh Water tank line. This valve MAY allow you fill the FW tank from the AF line IF it opens one side before it closes the other. This will depend on how your valve is built.

These 3 valves are the Hot Water Heater bypass valves. Normal position is with the cold inlet and hot outlet valves OPEN and bypass valve CLOSED. Switch the position of all 3 valves to bypass the HW heater for winterizing. Some RV's have a single combination cold water/bypass valve.

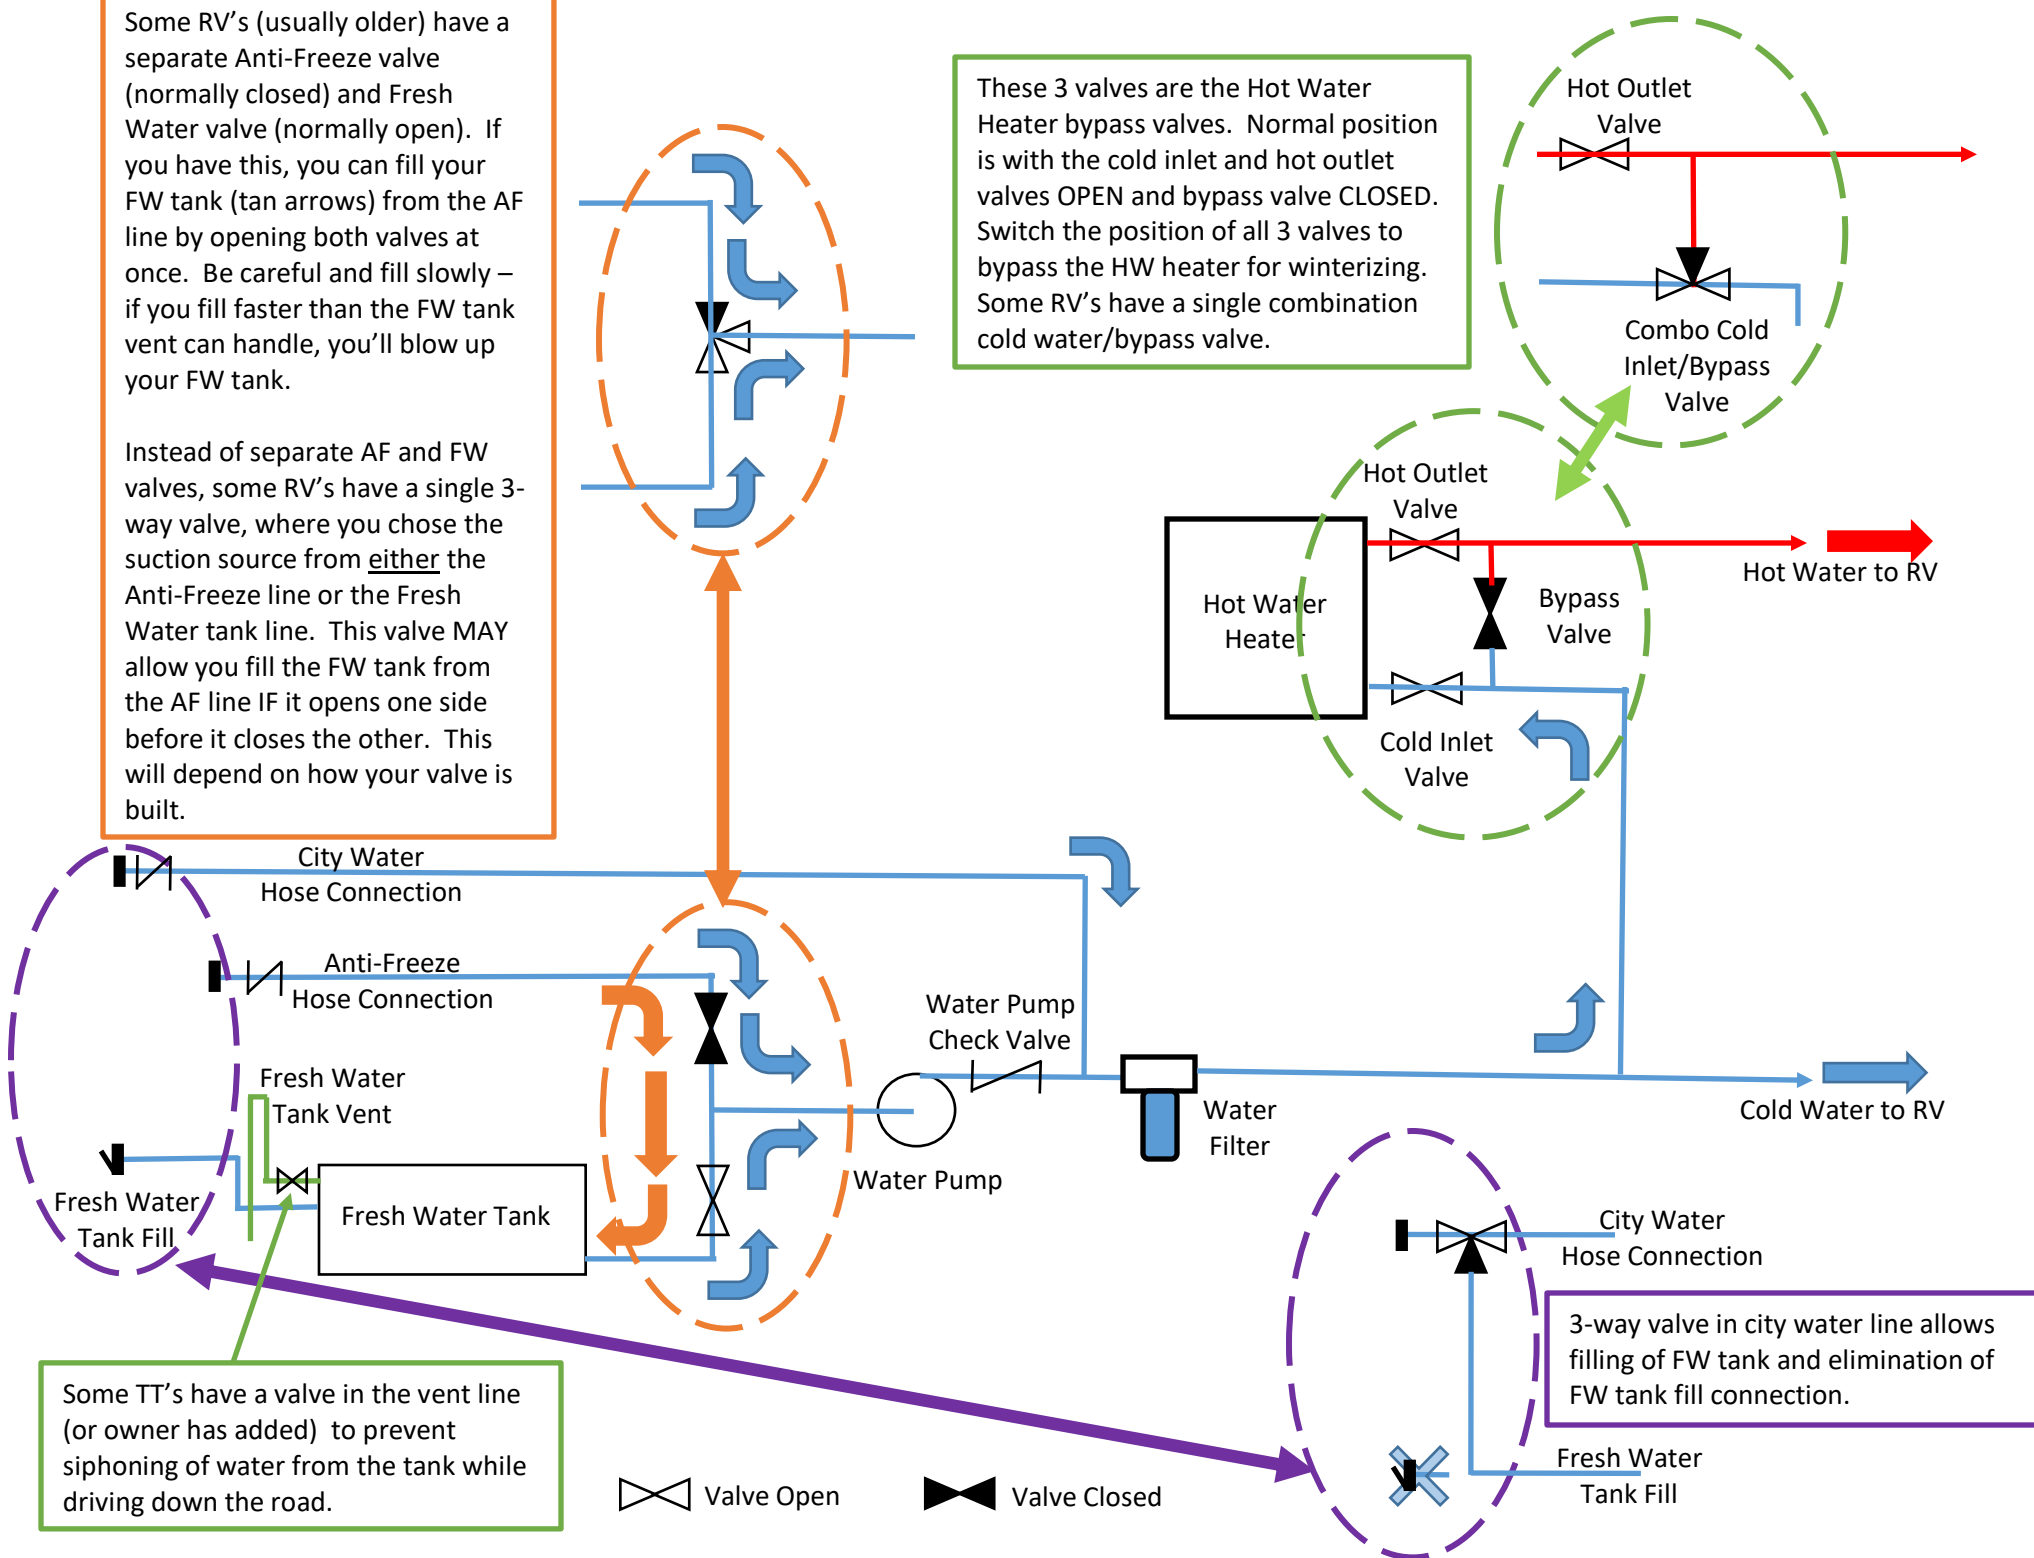

Some TT's have a valve in the vent line (or owner has added) to prevent siphoning of water from the tank while driving down the road.

3-way valve in city water line allows filling of FW tank and elimination of FW tank fill connection.