

SECTION 6

APPLIANCES

LIGHTING SURFACE BURNERS

The surface burners will feature either matchlit ignition or Piezo pilotless ignition. Be sure all control knobs are in the 'OFF' position before supplying gas to the appliance. Be sure the main LP gas supply is on before lighting the burner.

CAUTION

IF THE BURNER DOES NOT LIGHT WITHIN ABOUT 4 SECONDS OR IF THE FLAME SHOULD GO OUT DURING COOKING, TURN THE BURNER OFF. IF GAS HAS ACCUMULATED AND A STRONG GAS ODOR IS DETECTED, OPEN A WINDOW AND WAIT 5 MINUTES FOR THE GAS ODOR TO DISAPPEAR BEFORE RELIGHTING THE BURNER.

NOTE: IF THE APPLIANCE HAS NOT BEEN OPERATED FOR A PERIOD OF TIME, THE SURFACE BURNERS MAY BE DIFFICULT TO LIGHT DUE TO AIR IN THE GAS LINE.

CAUTION

DO NOT TURN THE CONTROL KNOB 'ON' AND ALLOW GAS TO ESCAPE BEFORE LIGHTING THE MATCH.

TO BLEED AIR FROM LINE

- Hold a lighted match next to the burner
- Turn the surface burner control knob to the LITE position
- When the burner lights, turn the knob back to the OFF position
- Depending upon your model, follow procedure for either 'Matchlit' ignition or 'Piezo' ignition.

MATCHLIT IGNITION

1. Place a pan on the burner grate.
2. Hold a lighted match next to the desired surface burner head.
3. Push in and turn the surface burner control knob to the LITE position.
4. When the burner lights, adjust the knob between HI and LOW to select the desired flame size.
5. After cooking, turn the surface burner knob to the OFF position.

PIEZO IGNITION

1. Place a pan on the burner grate.
2. Push in and turn the surface burner control knob to the 'LITE position. (IMPORTANT: Only light one surface burner at a time.)
3. Immediately, rotate the TOP BURNER IGNITOR knob to the right (clockwise) several clicks until the burner lights. The burner should light within 6 clicks or one full rotation of the knob.

CAUTION' INDICATES A HAZARDOUS SITUATION WHICH, IF NOT AVOIDED, COULD RESULT IN VEHICLE DAMAGE OR MINOR TO MODERATE INJURY.

NOTES:
