

Integrated On/Off Remote

User's Guide

Operation



To operate, push the ON button to turn the fireplace on, push the OFF button to turn the fireplace off.

! NOTE: Ensure that the 3 Position Switch on the product is set to the remote control setting (refer to your Owner's Manual for Manual Control information).

Initialization

Follow these steps for remote control initialization if required:


- ① Disconnect power to the unit.
- ② Set the 3 Position Switch to the Remote position (refer to your Owner's Manual for Manual Control information).
- ③ Wait a minimum of five (5) seconds and then re-acquire power to unit.
- ④ Within 10 seconds of re-acquiring power, press the ON button located on the remote control transmitter.

! NOTE: You will have only 10 seconds to perform this last step. Failure to do so will result in these steps needing to be followed again.

This will synchronize the remote control transmitter and receiver.

Battery Replacement

Figure 1

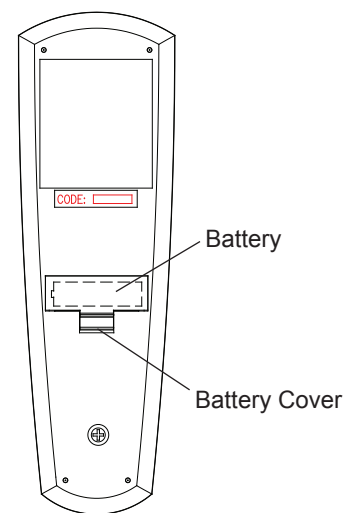

- ① Slide battery cover open on the hand held transmitter (Figure 1).
- ② Correctly replace one (1) 12 Volt (A23) battery in the battery holder.
- ③ Close the battery cover.

Integrated On/Off Remote Troubleshooting Guide

Symptom	Possible Cause	Solution
Remote does not operate unit.	3 Position Manual Control Switch is in incorrect position for remote use.	Move 3 Position Switch on the fireplace to the Remote position. Refer to your product's Owner's Manual for Manual Control information.
	Remote lost communication to fireplace.	Re-initialize remote to fireplace.
	Installed battery has depleted.	Replace battery.
	Remote receiver is defective.	Call Dimplex Customer Service at 1-888-346-7539 for assistance and have your fireplace model and serial numbers ready.
Product turns on/off on its own.	Radio frequency interference.	Call Dimplex Customer Service at 1-888-346-7539 for assistance and have your fireplace model and serial numbers ready.