




# TV and DVD Entertainment System Instructions

**PRESS**

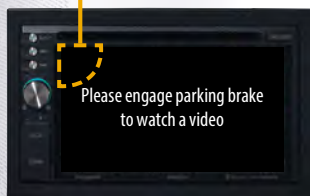

**Displaying a DVD playing from the JENSEN VM9726BTC, onto the main JENSEN television while the RV is moving.**

1. After inserting a DVD into the VM9726BTC, a black screen will appear that reads, "Please engage parking brake to watch a video"\*  
Press **UPPER LEFT HAND CORNER** of screen and a menu will appear
3. Press **REAR TFT** (located at bottom of screen)
4. Select **DISC** – movie will now play on main JENSEN television

To listen to another source from the VM9726BTC at the same time:

1. Press **FRT TFT** (located at the bottom of the screen)
2. Select input of your choice: **AM/FM, USB, Bluetooth, etc.**

\* The VM9726BTC will only display a movie if the parking break is engaged because federal law prohibits a driver from watching a movie while the vehicle is in motion.