


Disconnect main battery

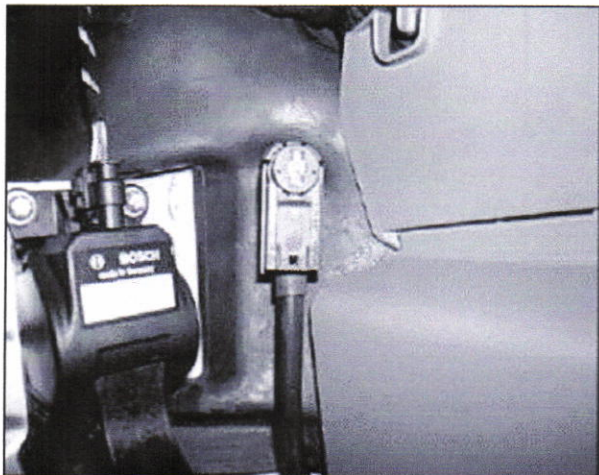

Main Battery Connector (Next To Accelerator Pedal)

Warning

Before working on the electrical system disconnect the main battery using the quick connect located right to the accelerator pedal in the driver foot well. Failure to disconnect the battery may cause serious damage to the electrical system and its components. Do not disconnect the battery before ensuring that the vehicle ignition key is in position 0 (off) or the key is removed, otherwise serious damage to the electrical system and its components may occur.

VERY IMPORTANT:

Do not install an auxiliary battery without a battery cut-off relay and suitable fuses for the charge current.

Prefuse box at main battery


Warning

Do not use aux battery as a start aid. Using an auxiliary battery as a start aid may lead to severe damage to electrical components.



Starter Battery (under driver floor)

Locate starter battery under driver floor matt. Disconnect all electrical seat connectors. Remove driver seat (4 screws).

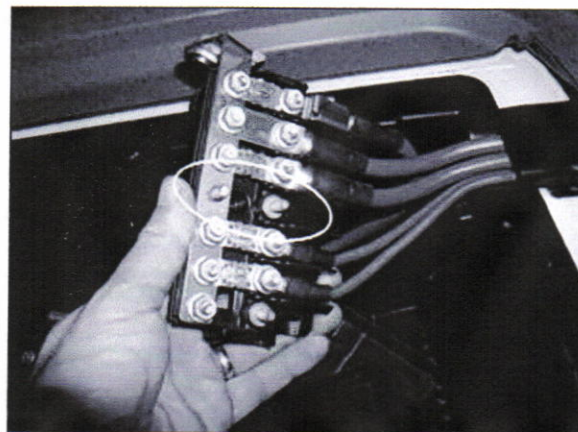

From Main Battery

Unhook prefuse box and use existing empty terminal Position #4. See owners manual for fuse locations. Use OEM 150A fuse (MB# N 000000 000432).

For all battery wiring use 35mm² [2 gauge] cable (local supply).