

Prior to towing, follow all these directions in this order:

- Engage the parking brake.
- Be sure the ignition is switched on.
- Depress the brake pedal and keep it pressed.
- Move the gear selector lever to the neutral position – N.
- Release the brake pedal.
- With the gear selector lever in neutral
- position **N**, the key cannot be turned fully
- to starter switch position **0**. Therefore
- turn the key in the starter switch as far
- left as it will go when switching off the
- ignition.
- Turn off the ignition.
- Leave the key in the starter switch.
- Wait approximately 30 seconds – until the multifunction display in the instrument cluster is totally blank.
- Turn the battery off using the battery cutoff switch
- Engage auxiliary brake (turn on toggle switch **to the right position**)
- Release the parking brake.
- Install bungee cord on steering wheel (40 inch)
- Throughout the tow make sure the gear selector lever remains in the neutral position “N” – with the ignition turned to the off position.

After towing:

- Remove bungee cord
- Engage the parking brake.
- Turn off auxiliary brake (turn toggle switch **to the left position**)
- Turn on battery
- Hold down on brake pedal before turning key to on position! The transmission has to relearn the codes. It takes about 30 seconds. When the "N" neutral symbol shows on the dash the car will start and you are finished.
- Move gear selector lever to Park position
- Remove key from starter switch