


## Installation procedure for Ducted Models (continued)

7. Assemble the hold down bars (4) onto the hold down bolts (6). Raise the plenum deck assembly towards the installation hole. Screw the hold down bolts (6) into the inserts on the base of the unit. Tighten bolts until firm, but **do not exceed 6 Nm (4.4 foot-pounds)**.

NOTE orientation of plenum deck to air conditioner. The return air side aligns with the front of the air conditioner; the air outlet side is at the rear.

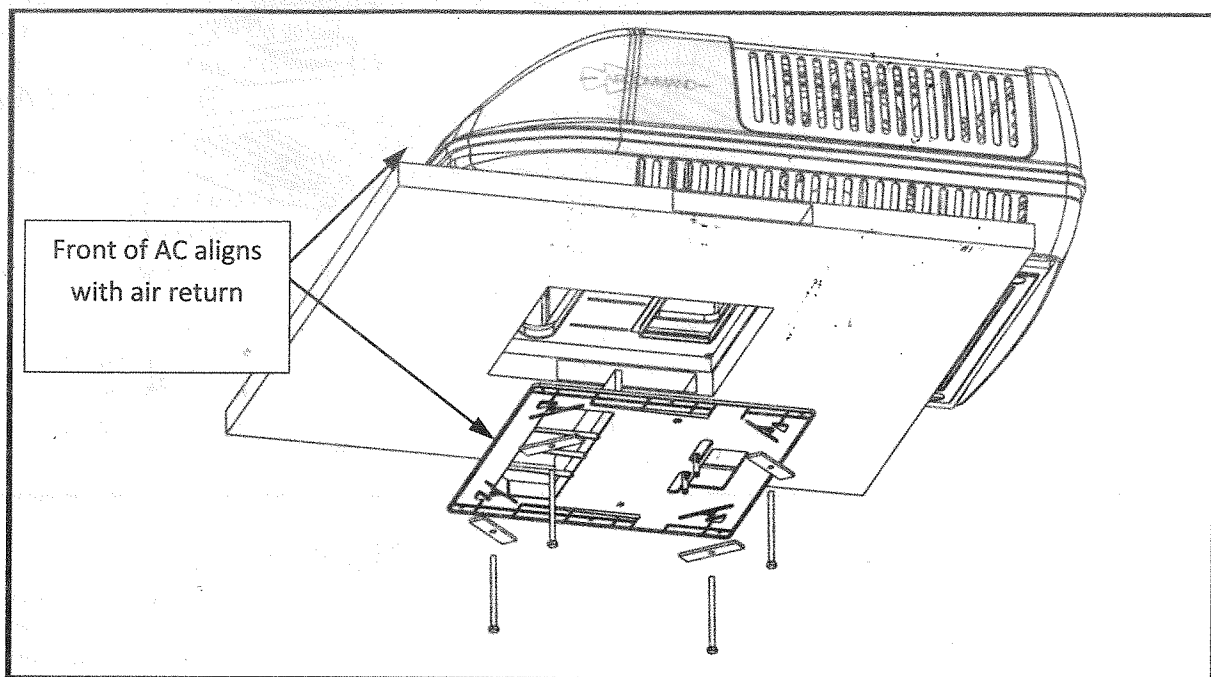

Note: Ensure that the hold down bars (4) are aligned with the recess in the plenum deck before tightening.

