
Conversion from Coleman Mach to Honeywell RTH 111 Thermostat

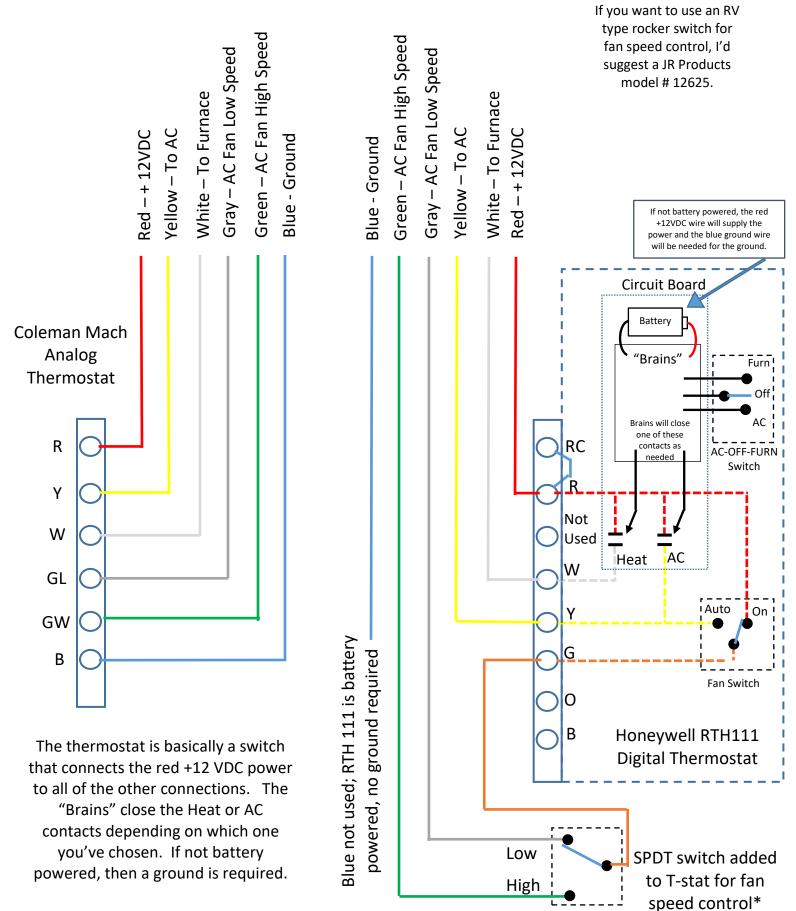

*If you don't want to add the SPDT switch, just pick a speed wire and attach it to the G connection.