


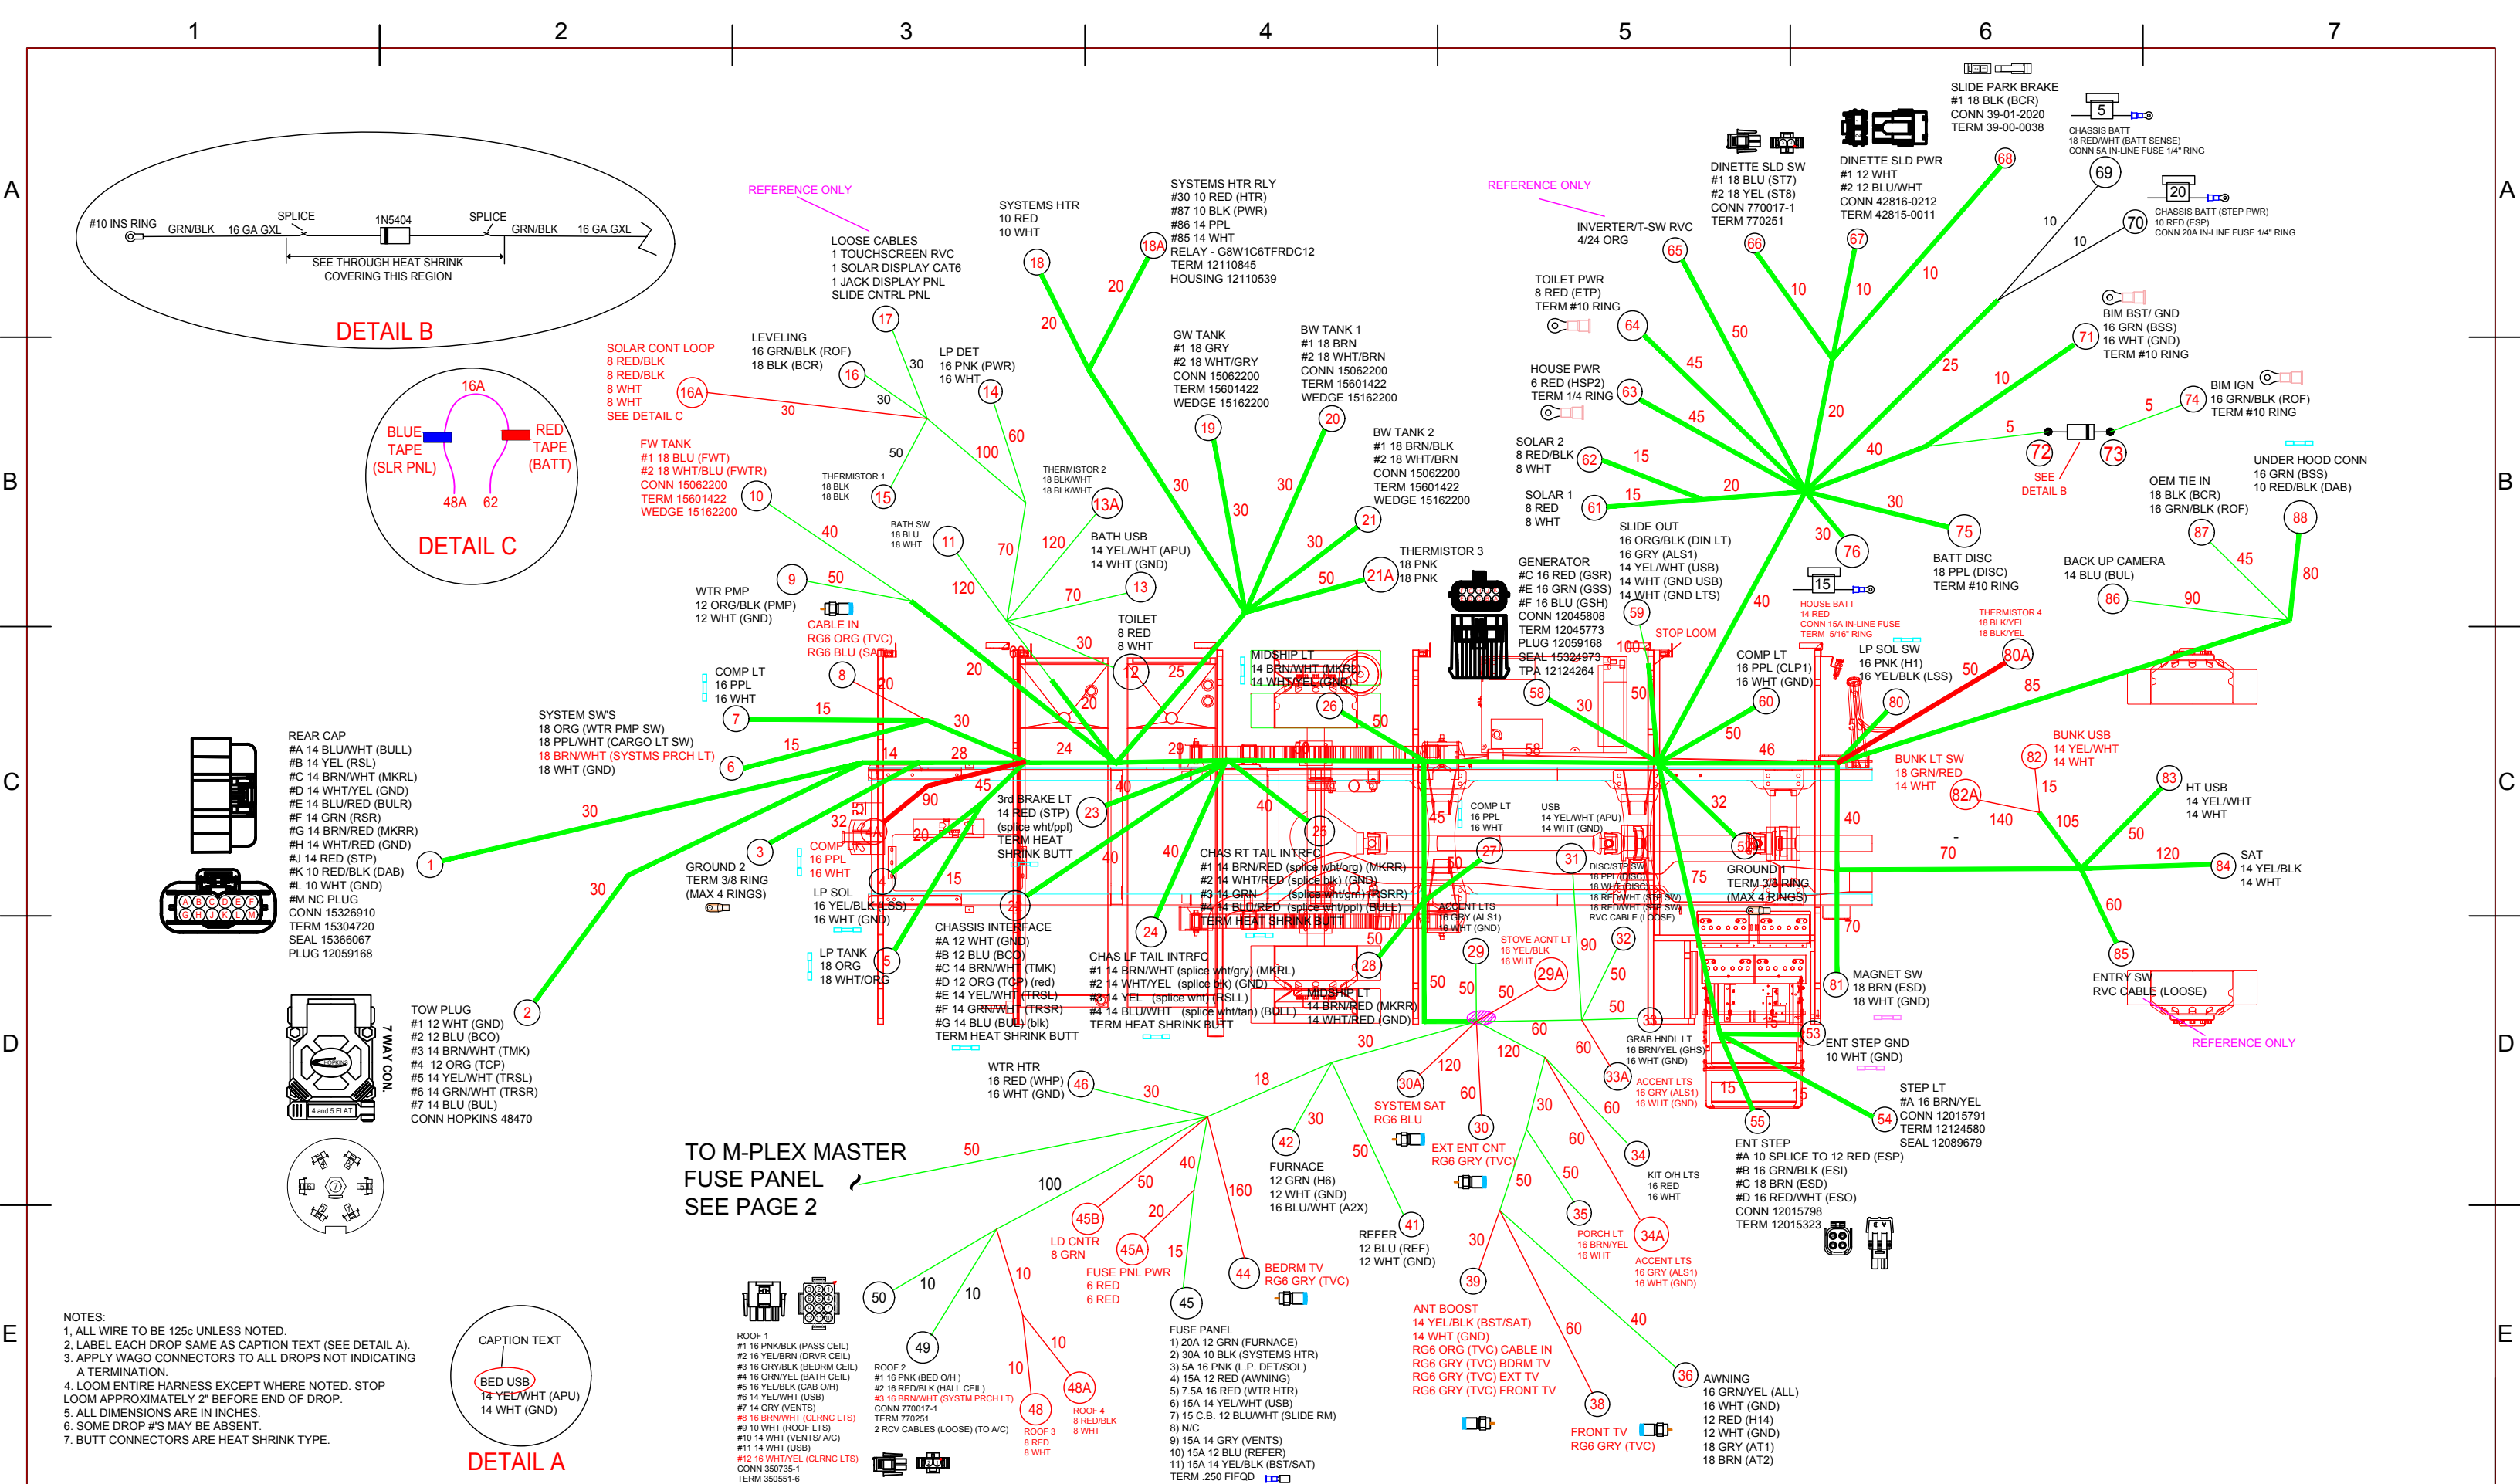

NOTES:
1. ALL WIRE TO BE 125c UNLESS NOTED.
2. LABEL EACH DROP SAME AS CAPTION TEXT (SEE DETAIL A).
3. APPLY WAGO CONNECTORS TO ALL DROPS NOT INDICATING A TERMINATION.
4. LOOM ENTIRE HARNESS EXCEPT WHERE NOTED. STOP LOOM APPROXIMATELY 2" BEFORE END OF DROP.
5. ALL DIMENSIONS ARE IN INCHES.
6. SOME DROP #'S MAY BE ABSENT.
7. BUTT CONNECTORS ARE HEAT SHRINK TYPE.

