


# Satellite Pre-Wire for



All coaxes and the TRAV'LER control cable are located under a roof sticker designating the prewire location. They can be accessed by carefully cutting back the rubber roof.

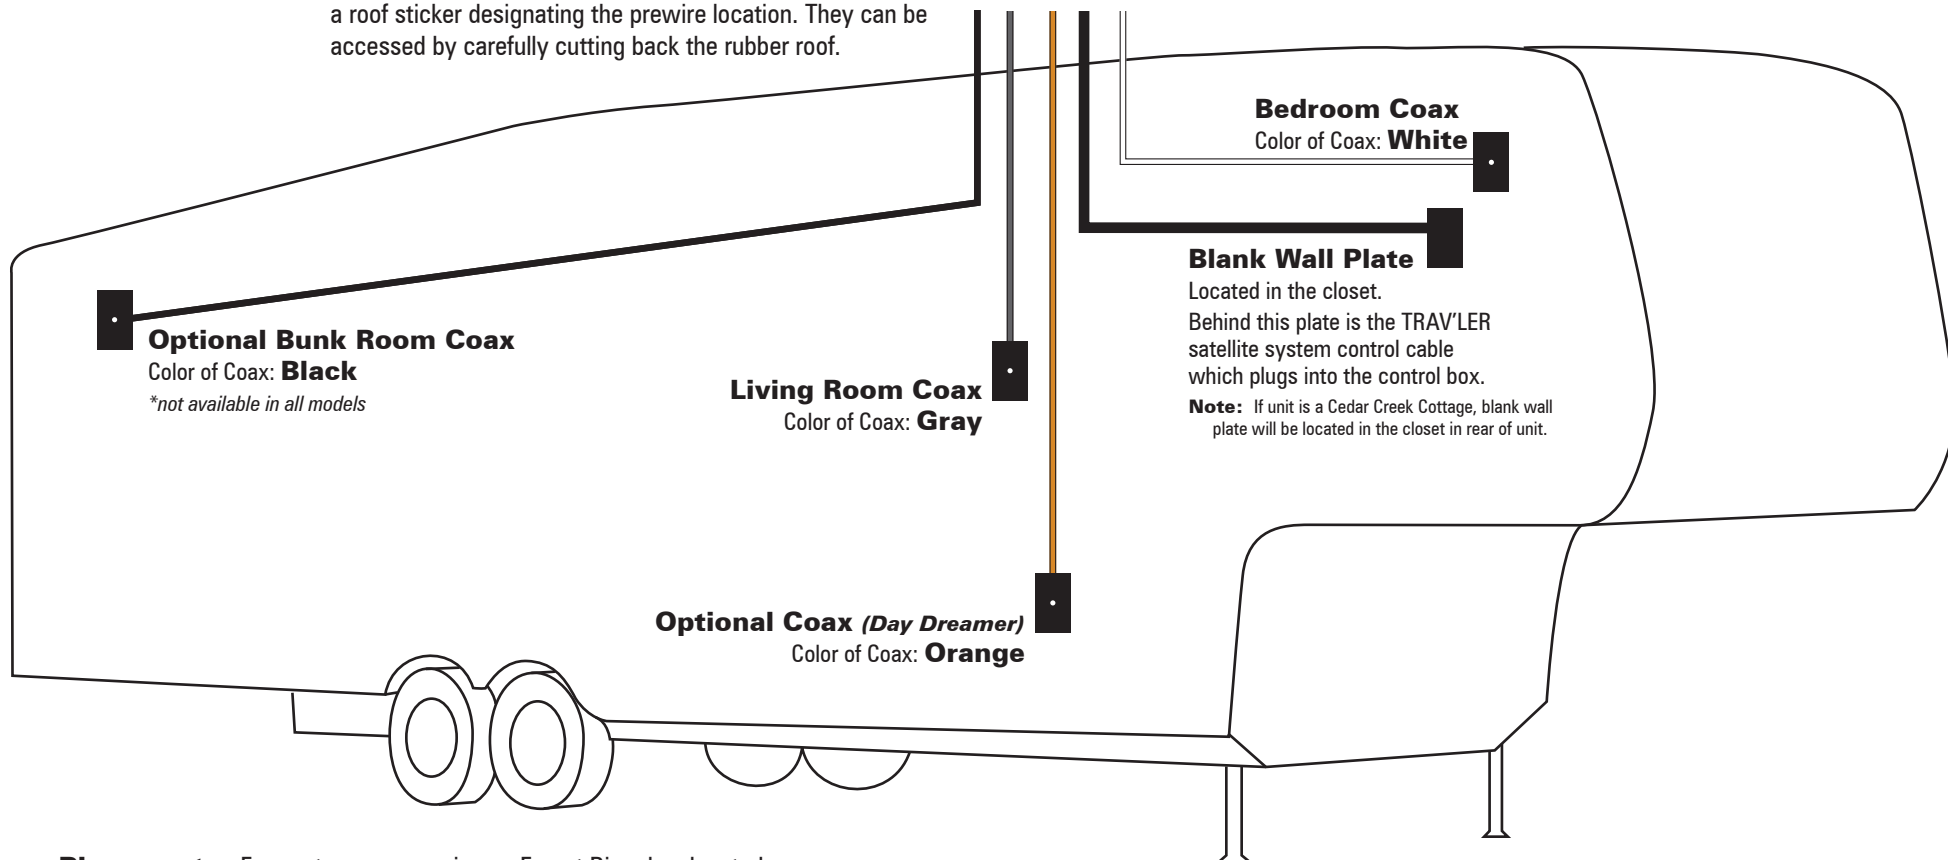

## CEDAR CREEK

*Day Dreamer*



**Please note:** For customer convenience, Forest River has located a 120V receptacle near each coaxial cable plate for plugging in the satellite receiver and one in the living room/kitchen for plugging in the TRAV'LER satellite system control box.


# Satellite Pre-Wire



**! Before beginning the installation, read all installation instructions for the TRAV'LER.**

1. Before you begin the installation, you will need to find the Pre-wire cable location, located under the Winegard Pre-wire roof label.

The TRAV'LER must be installed so that the cable entry on the TRAV'LER is within a 3 foot radius of the Pre-wire roof label. See Figure 1.

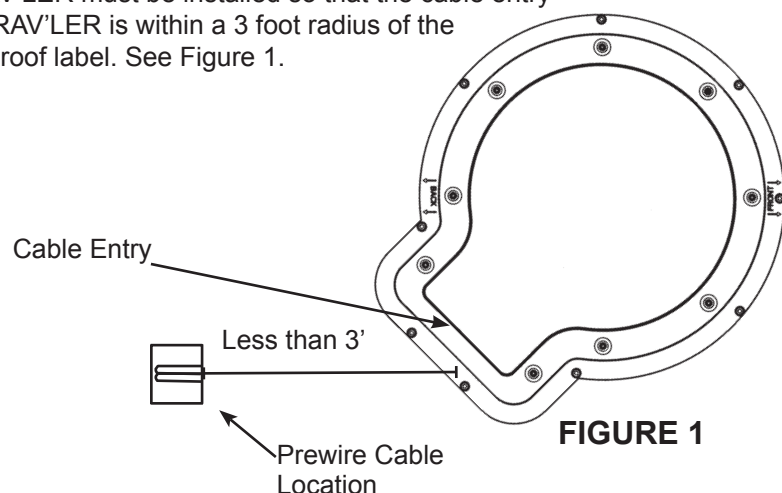

2. Tip the TRAV'LER on its side and unplug the Power/Comm cable. The Pre-Wire cables will replace these. The Power/Comm plug is located inside the connection access. See figure 2.

This is best done from beneath the unit before you seal the unit to the roof.

With the Power/Comm cable unplugged, unscrew the Heyco connection from the TRAV'LER.

**! Slide the nut holding the Heyco connector to the TRAV'LER up onto the cable connected to the TRAV'LER electronics to prevent the nut from getting lost.**

3. Insert the Pre-wired Power/Comm cable into the hole that held the original Power/Comm cable and plug it into the TRAV'LER and fit the new Heyco back into the opening that held the original Heyco.

Thread the nut onto the new Heyco.

Set the TRAV'LER down and connect the Pre-Wired Coax cables. Refer to figure 3 before connecting the coax. You are now ready to begin the TRAV'LER installation.

